

1511	CAUTION - DO NOT OPERATE ENGINE WITHOUT ACCESS COVER & ALL SCREWS TIGHTLY IN PLACE	ON REAR ABOVE LOWER LONGERON BOOMS OUTDR. SIDE NO. 3, INBD SIDE NO. 2	2	9-4847-3
217	BLOSHED FOR AROMATIC FUEL (RATE OF ALUMINUM)	AT FUEL FILLER NEAR 16 PLACES STENCIL 112 IN. WIDE BARRED RED LINE AROUND FILLER NEAR BOOMS	1	9-4847-3
218	SERVICE THIS AIRPLANE WITH 100 OCTANE FUEL ONLY	ON FUSELAGE, BELOW SERIAL NUMBER, BELOW AFT NAV. WINDOW - L.H. SIDE	1	9-4847-3
219	FUEL CELL TREATED WITH BLOSHING COMPOUND FOR USE WITH FUEL CONTAINING AROMATIC	ON TOP WING BY EACH FUEL TANK FILLER CAP	8	9-18117-8
224	K-35 CAMERA	SEE 75-3500	1	9-24194-4
225	K-35 CAMERA	SEE 75-3500	1	9-24194-4
226	K-35 CAMERA	SEE 75-3500	1	9-24194-4
227	K-35 CAMERA	SEE 75-3500	1	9-24194-4
228	K-35 CAMERA	SEE 75-3500	1	9-24194-4
229	K-35 CAMERA	SEE 75-3500	1	9-24194-4
230	K-35 CAMERA	SEE 75-3500	1	9-24194-4
231	K-35 CAMERA	SEE 75-3500	1	9-24194-4
232	K-35 CAMERA	SEE 75-3500	1	9-24194-4
233	K-35 CAMERA	SEE 75-3500	1	9-24194-4
234	K-35 CAMERA	SEE 75-3500	1	9-24194-4
235	K-35 CAMERA	SEE 75-3500	1	9-24194-4
236	K-35 CAMERA	SEE 75-3500	1	9-24194-4
237	K-35 CAMERA	SEE 75-3500	1	9-24194-4
238	K-35 CAMERA	SEE 75-3500	1	9-24194-4
239	K-35 CAMERA	SEE 75-3500	1	9-24194-4
240	K-35 CAMERA	SEE 75-3500	1	9-24194-4
241	K-35 CAMERA	SEE 75-3500	1	9-24194-4
242	K-35 CAMERA	SEE 75-3500	1	9-24194-4
243	K-35 CAMERA	SEE 75-3500	1	9-24194-4
244	K-35 CAMERA	SEE 75-3500	1	9-24194-4
245	K-35 CAMERA	SEE 75-3500	1	9-24194-4
246	K-35 CAMERA	SEE 75-3500	1	9-24194-4
247	K-35 CAMERA	SEE 75-3500	1	9-24194-4
248	K-35 CAMERA	SEE 75-3500	1	9-24194-4
249	K-35 CAMERA	SEE 75-3500	1	9-24194-4
250	K-35 CAMERA	SEE 75-3500	1	9-24194-4
251	K-35 CAMERA	SEE 75-3500	1	9-24194-4
252	K-35 CAMERA	SEE 75-3500	1	9-24194-4
253	K-35 CAMERA	SEE 75-3500	1	9-24194-4
254	K-35 CAMERA	SEE 75-3500	1	9-24194-4
255	K-35 CAMERA	SEE 75-3500	1	9-24194-4
256	K-35 CAMERA	SEE 75-3500	1	9-24194-4
257	K-35 CAMERA	SEE 75-3500	1	9-24194-4
258	K-35 CAMERA	SEE 75-3500	1	9-24194-4
259	K-35 CAMERA	SEE 75-3500	1	9-24194-4
260	K-35 CAMERA	SEE 75-3500	1	9-24194-4
261	K-35 CAMERA	SEE 75-3500	1	9-24194-4
262	K-35 CAMERA	SEE 75-3500	1	9-24194-4
263	K-35 CAMERA	SEE 75-3500	1	9-24194-4
264	K-35 CAMERA	SEE 75-3500	1	9-24194-4
265	K-35 CAMERA	SEE 75-3500	1	9-24194-4
266	K-35 CAMERA	SEE 75-3500	1	9-24194-4
267	K-35 CAMERA	SEE 75-3500	1	9-24194-4
268	K-35 CAMERA	SEE 75-3500	1	9-24194-4
269	K-35 CAMERA	SEE 75-3500	1	9-24194-4
270	K-35 CAMERA	SEE 75-3500	1	9-24194-4
271	K-35 CAMERA	SEE 75-3500	1	9-24194-4
272	K-35 CAMERA	SEE 75-3500	1	9-24194-4
273	K-35 CAMERA	SEE 75-3500	1	9-24194-4
274	K-35 CAMERA	SEE 75-3500	1	9-24194-4
275	K-35 CAMERA	SEE 75-3500	1	9-24194-4
276	K-35 CAMERA	SEE 75-3500	1	9-24194-4
277	K-35 CAMERA	SEE 75-3500	1	9-24194-4
278	K-35 CAMERA	SEE 75-3500	1	9-24194-4
279	K-35 CAMERA	SEE 75-3500	1	9-24194-4
280	K-35 CAMERA	SEE 75-3500	1	9-24194-4
281	K-35 CAMERA	SEE 75-3500	1	9-24194-4
282	K-35 CAMERA	SEE 75-3500	1	9-24194-4
283	K-35 CAMERA	SEE 75-3500	1	9-24194-4
284	K-35 CAMERA	SEE 75-3500	1	9-24194-4
285	K-35 CAMERA	SEE 75-3500	1	9-24194-4
286	K-35 CAMERA	SEE 75-3500	1	9-24194-4
287	K-35 CAMERA	SEE 75-3500	1	9-24194-4
288	K-35 CAMERA	SEE 75-3500	1	9-24194-4
289	K-35 CAMERA	SEE 75-3500	1	9-24194-4
290	K-35 CAMERA	SEE 75-3500	1	9-24194-4
291	K-35 CAMERA	SEE 75-3500	1	9-24194-4
292	K-35 CAMERA	SEE 75-3500	1	9-24194-4
293	K-35 CAMERA	SEE 75-3500	1	9-24194-4
294	K-35 CAMERA	SEE 75-3500	1	9-24194-4
295	K-35 CAMERA	SEE 75-3500	1	9-24194-4
296	K-35 CAMERA	SEE 75-3500	1	9-24194-4
297	K-35 CAMERA	SEE 75-3500	1	9-24194-4
298	K-35 CAMERA	SEE 75-3500	1	9-24194-4
299	K-35 CAMERA	SEE 75-3500	1	9-24194-4
300	K-35 CAMERA	SEE 75-3500	1	9-24194-4

299	IGNITION WIND SHIELD NO. 76		1	9-4841-12
300	TAIL BEAR WARNING S.W. NO. 75		1	9-18789-14
301	IGNITION SHIELD NO. 74		1	9-18789-9
302	IGNITION SHIELD NO. 73		1	9-18789-8
303	START CORR. SHIELD NO. 71		1	9-4841-28
304	INBD. IGN. SHIELD NO. 70		1	9-4841-28
305	OUTDR. IGN. SHIELD NO. 69		1	9-4841-27
306	75 FILL GLYCOL TANK	ON BOTTOM SIDE OF DLY. TANK ACCESS DOOR	1	9-4848-01
307	SUPCHG. REG. SUPT.	NAC. NO. 1 & 4 REAR OUTDR. SIDE NAC. NO. 2 & 3 IN THE WING ON AFT SURFACE OF BRACKET STA. 4 & 7	4	9-4843-9
308	BOMB NIGHT STRAWASE	ON BOMB BAY 803 BOMBARDIER'S COMPT.	1	9-4848-10
309	MARKER BEACON	L.H. SIDE OF FUSELAGE OFF. MAIN ENTRY DOOR	1	9-4889-24
310	VAC. REL. VALVE	IN LOWER PART OF BODY BETWEEN STA. 4 & 5	1	9-4841-25
311	RETRACTING MOTOR SHIELD NO. 376		1	9-4848-13
312	SUPCHG. / L.V. TANK	ON REAR SPAN CROSS JUST AFT. OF TANK IN WING AFT. OF NO. 2 & 3 NAC.	2	9-4848-12
313	PROP FEATHERING MOTOR	ON FIREWALL OF EACH NACELLE	4	9-4843-11
314	HYD. BRAKE LINES	ON FWD. SIDE SPAN NO. 2 & 3 NACELLE	2	9-4843-10
315	THRUW. REG. LINES	ON FWD. SIDE OF FIREWALL 1 PER NACELLE	4	9-4843-9
316	DRIFT SIGNAL DOOR	LOWER L.H. SIDE OF BODY JUST AFT OF STA. 5	1	9-4843-7
317	OPERATION OF THE NORMAL SALV. BOMB RELEASE	BOMB BAY FUEL TANK	2	9-4848-28
318	HYD. ACCUMULATOR DIRECTIONS	LOWER L.H. SIDE OF FUSELAGE JUST FWD. STA. 6	1	9-4848-4
319	HYD. PRESSURE WARNING SW.	L.H. SIDE OF FUSELAGE JUST FWD. OF STA. 3	1	9-4848-28
320	FUEL SHUT OFF VALVE	NACELLE NO. 2 & 3 ON REAR SPAN NO. STA. 2, NO. 1 & 4 NACELLE GUYED. OF STA. 8 ON FRONT SPAN	4	9-4848-22
321	FWD. CABIN HEAT SHUTTER VALVE LOCATED IN BOTTOM CENTER OF DUCT. SEE T.O. 15-20002 FOR ADJ.	L.H. WING DUCT STRUCTURE UNDER HEAT DUCT APT. STA. 4	1	9-4848-1
322	REAR CABIN HEAT SHUTTER VALVE LOCATED IN BOTTOM CENTER OF DUCT. SEE T.O. 15-20002 FOR ADJ.	L.H. WING DUCT STRUCTURE UNDER HEAT DUCT APT. STA. 4	1	9-18789-14
323	PROP ANTI-ICER PUMPS	AFT. BLK. 5 UNDER CAMERA REAR	1	9-18789-24
324	HYD. PRESSURE REG.	BOMB BAY TRUSS	1	9-18789-27
325	FUEL TRANSFER PUMP	BOMB BAY TRUSS	1	9-18789-28
326	ACCUMULATOR BLEED VALVE	BOMB BAY TRUSS	1	9-18789-24
327	HYD. FILTER	BOMB BAY TRUSS	1	9-18789-21
328	ANTI-ICER NEEDLE VALVE	ON ALL ENG. NAC. FIREWALLS	4	9-18789-39
329	R. WAD.	ON ALL ENG. NAC. FIREWALLS	4	9-18789-31
330	L. WAD.	ON ALL ENG. NAC. FIREWALLS	4	9-18789-32
331	PROP FEATHER TO SOV.	DB LINE	4	9-18789-33
332	OLYCL. TANK VENT	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-34
333	DIL. OIL OUT	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-35
334	DIL. OIL IN	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-36
335	OIL SEK. VENT	NO. 2 & 3 NACELLE	2	9-18789-37
336	OIL TANK VENT	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-38
337	HYD. COWL FLAP	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-39
338	VAPOR VENT	ON FWD. SIDE OF EACH NAC. FIREWALL	4	9-18789-40
339	FUEL PUMP REL. LINE	ON CAB. DUCT IN EACH NAC. JUST FWD. OF FIREWALL	4	9-18789-41
340	DIL. OIL CONTROL VALVE	INBD. SIDE IN NOS. 1 & 2 OUTDR. SIDE IN NOS. 3 & 4 NAC.	4	9-18789-42
341	OLYCL. BY-PASS RELEASE VALVE	NO. 2 NACELLE	1	9-18789-43
342	TACHOMETER	1 IN EACH ENG. NACELLE ON AUTOSYN SHIELD	2	9-18789-44
343	MAN. PRES.	1 IN EACH ENG. NACELLE ON AUTOSYN SHIELD	4	9-18789-45
344	FUEL PRES.	1 IN EACH ENG. NACELLE ON AUTOSYN SHIELD	4	9-18789-46
345	OIL TEMP.	1 IN EACH ENG. NACELLE ON AUTOSYN SHIELD	4	9-18789-47
346	OIL PRES.	1 IN EACH ENG. NACELLE ON AUTOSYN SHIELD	4	9-18789-48
347	OLYCL. FILTER	NO. 2 NACELLE	1	9-18789-49
348	VAC. OIL SEPARATOR	IN EACH INBD. NACELLE UNDER PILOTS FLOOR	2	9-4848-4
349	VAC. RELIEF VALVE	1 IN EACH INBD. NACELLE	2	9-18789-23
350	PRES. RELIEF VALVE	1 IN EACH INBD. NACELLE 1 IN WING GAP R.H. SIDE	2	9-18789-24
351	CHEEK VALVE		5	9-18789-24
352	OLYCL. AIR TEMP.	L.H. LEADING EDGE AT ROOT	1	9-18789-14
353	DE-ICER MIXTR. VALVE ACCESS DOOR	R.H. SIDE BETWEEN STA. 4 & 5	1	9-4841-28
354	AIRPLANE FLIGHT REPAIRS	ON REPORT BOX FWD. SIDE STA. 4 DOOR	1	9-4848-23

417	AIR VALVE	ON LANDING GEAR OLEO STRUTS	2	9-4842-24
418	LOAD POINTS OUTDR. ---	ON L.H. ARMO. CAN FOR TAIL GUN	1	9-4842-25
419	LOAD POINTS OUTDR. ---	ON R.H. ARMO. CAN FOR TAIL GUN	1	9-4842-25
420	NACELLE PLATFORM BRACES	ON EACH BRACE, R.H. SIDE OF BODY BETWEEN STA. 2 & 3	2	9-4842-19
421	LOCK WIRE VAL. VALVE SHUT	LOWER L.H. SIDE JUST FWD. OF STA. 5 ON TOP HUBBIE OF BODY APT. OF STA. 6	2	9-4842-10
422	DRIFT METER VAL. VALVE LOCK WIRE WHEN NOT IN USE	R.H. SIDE BOMBARDIER COMPT. JUST FWD. STA. 3	1	9-4848-9
423	AIR SHUTTER VALVE - SEE T.O. 15-20002-2	R.H. SIDE OF NAVIGATOR'S COMPT.	1	9-4848-5
424	VARIABLE VAC. OFFICE	UNDER FWD. SIDE OF PILOT'S INST. BOARD	1	9-4842-17
425	ANTI-ICER ALL. KNOB	ON ELEV. TRIM TAB WHEEL	1	9-4848-2
426	REPLACE SILICA GEL WHEN 1/4 PINK	FIRE 2 APT. OF EACH SIDE WINDOW IN PILOT'S COMPT. ON BOMBARDIER'S WARDROOM	6	9-4848-2
427	AIR SHUTTER VALVE ON OPPOSITE SIDE OF DUCT	ON HOT AIR DUCT JUST FWD. OF STA. 3	1	9-18789-14
428	OUTDR. RELIEF VALVE	JUST APT. OF STA. 3 LOWER L.H. SIDE OF BODY	1	9-4841-24
429	OUTDR. RELIEF VALVE	L.H. SIDE OF BODY APT. STA. 4 LOWER SIDE OF FUSELAGE JUST APT. STA. 3	1	9-18789-21
430	UPPER REFLECTOR BEFORE OPENING WINDOW	ON EACH SIDE OF BODY JUST FWD. OF THE SIDE WINDOWS	2	9-4842-27
431	WARNING - RELEASE FRONT & REAR LATCHES BEFORE OPENING CAMERA DOOR. LATCH DOOR WHEN CLOSED & BOMBING GUNFIRE	IN CAMERA WELL BESIDE FWD. CAMERA DOOR LATCH	1	9-4848-10
432	PULL IN EMERGENCY ONLY	ON FRONT ENTRANCE DOOR ON REAR ENTRANCE DOOR	2	9-4848-33
433	TO OPEN WINDOW WIRE HANDLE FWD.	ON EACH SIDE OF GUN WINDOW WIRE HANDLE	2	9-4842-17
434	INST DATE	ON ALL SAFETY SEAT BELTS	1	9-4842-1
435	--- 38 SCREWS ---	ON AIRLON CONTROL COVERS APT. OF BLK. NO. 4 RADIO COMPARTMENT	2	9-4842-19
436	L.H. 21-A	RADIO COMPASS LOOK R.H. SIDE	1	9-4842-19
437	FUEL PUMP BRAIN	LOWER RIGHT SIDE OF EACH NACELLE	4	9-4842-24
438	AIRPLANE DESIGNATOR	IDENTIFICATION - YELLOW SHADE 48 OF BLK. 4	1	9-4842-1
439	NO. 1 ENG. NO. 2 ENG. NO. 3 ENG. NO. 4 ENG. NO. 5	LOCATE (HONEY) SHIELD 48(14-2370) ON OUTDR. SIDE OFF. GENERATOR VOLTAGE REGULATOR NEAR STA. 36 (NO. 1 IS APT.)	1	9-4842-1
440	FUEL WARNING ON FOLLOW-UP SYSTEM INDICATE	ON FLIGHT CONTROL COVER. 2 PLACES ON OLEO. COX. 48 UNDER COCKPIT FLOOR, R.H. SIDE	2	9-4842-19
441	FUEL STRAINER	ON ALL NACELLE INBD. SIDE. COVER FRONT	4	9-4842-19
442	WEIGHT EMPTY INCLUDING VALVE & SAFETY SIDE NUMBER	ON ENG. FIRE EXTN. A.C. SPEC. 4834	1	9-4842-19
443	WEIGHT OF CHARGE	SEE SPEC. 4834	1	9-4842-19
444	MAX. CHARGE CAPACITY	SEE SPEC. 4834	1	9-4842-19
445	CARBON DIOXIDE FLEX STRAP TIE 8-17E	2 PLACES ON FLIGHT CONTROL COVER	2	9-4842-19
446	LINE BOOK EXIST.	ON COX. BOTTLE ACCESS DOOR IN BOMB BAY	1	9-4842-21
447	COX. FIRE EXTN.	ON OUTLET ON INBD. LOWER NO. 2 NACELLE	1	9-18789-3
448	FORWARD --- LEFT OR RIGHT A.S. NO.	INSIDE LEFT AND RIGHT HAND REMOVABLE FLAP DOORS	1	9-4842-2
449	FUEL TRANSFER PUMP	ON FWD. SIDE OF BLK. 4 BOTTOM CENTER FUSELAGE	1	9-4842-28
450	PLACE DOT ON BOMB ALONG WITH ALL FLIGHT TYPE BOMB PARTS (OFF SLOT IN LOCKED POSITION)	NO. DOT SHOWN	1	9-4842-28
451	OLYCL. OVERFLOW	ONE OUTLET ON INBD. LOWER NO. 2 NACELLE	1	9-18789-3
452	FWD --- A.C. NO. NAC. NO.	INSIDE UPPER AND LOWER ACCESS DOORS OF NO. 1 AND NO. 4 NACELLE	2	9-4842-7
453	OLYCL. PUMP DRAIN	ONE OUTLET ON INBD. LOWER NO. 2 NACELLE	1	9-18789-1
454	A.C. NUMBER	ON BOTTOM OF CHAIRS ON CONTROL ACCESS DOORS, L.H. & R.H.	4	9-4842-13
455	WINDSTER PUMP DRAIN	4 PLACES ON LOWER WING SURFACES	4	9-4842-13
456	BATTERY VENT	TWO PLACES R.H. WING 1 PLACE L.H. WING APT		